


**SECTION 501-05 Interior Trim and Ornamentation**

CONTENTS	PAGE
A-Pillar Trim Panel .....	501-05-2

## A-Pillar Trim Panel

### NOTE:

Convertible shown, coupe similar.

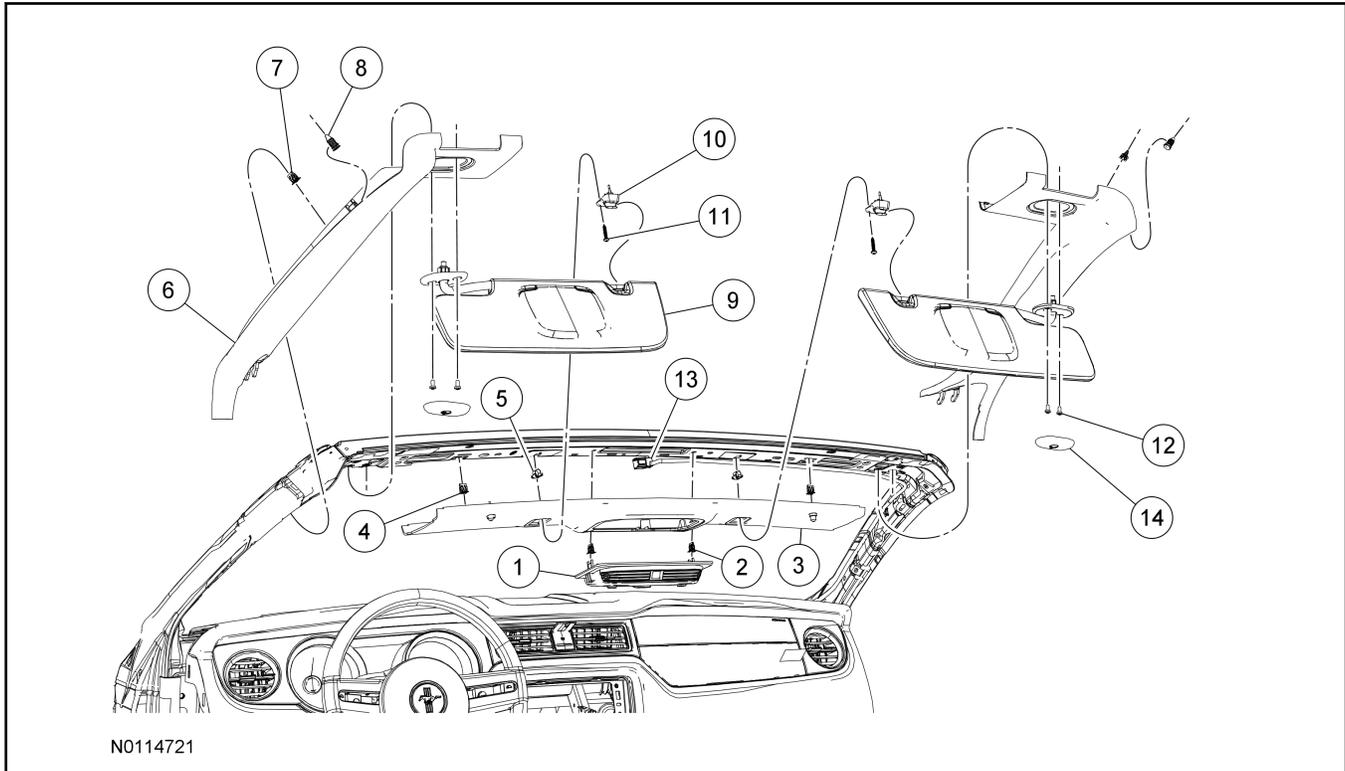

Item	Part Number	Description
1	6351A58	Overhead console
2	W704021	Overhead console retainer (2 required)
3	760387	Header trim panel
4	W704021	Header trim panel retainer (2 required)
5	1704100	Sun visor clip insert (2 required)
6	7603599 LH/ 7603598 RH	A-pillar trim panel
7	W704021	A-pillar trim panel retaining clip
8	7603598	A-pillar trim panel pushpin
9	6304105 LH/ 6304104 RH	Sun visor
10	6304132	Sun visor clip
11	—	Sun visor clip screw (2 required) (part of 6304132)
12	—	Sun visor screw (4 required) ( part of 6304105 LH/6304104 RH)
13	14334	Overhead console wiring harness
14	76046B96	Sun visor bracket cover (2 required)

### Removal and Installation

- Remove the sun visor bracket cover.
- Remove the 2 sun visor screws and set the sun visor aside.
- Pull outward on the A-pillar trim to release the retaining clip and the pushpin from the body.
- Pull slightly down and straight back on the A-pillar to unhook the front lower portions of the A-pillar trim panel.
- NOTE:**  
To avoid any damage to the A-pillar trim panel, remove any clips from the body and attach them to the A-pillar trim panel.

---

(Continued)

To install, reverse the removal procedure.